

Kimberley Knot Keyring




This knot is used extensively for attaching the bridle reins to a bit ring on saddlery in the Kimberleys of Western Australia. It has the advantages of removing the necessity for buckles as well as giving double thickness of leather to the bit ring – adding greatly to strength and durability and creating an interesting decorative knot.

KIT CONTENTS:

- 2x Pre-cut vegetable tanned leather strips
- 2x Brass keyrings


1

With the shiny side of the leather facing you, fold the top over so the length of the slits is equal both sides.

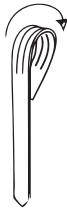

2

Twist each individual loop anti-clockwise as shown.

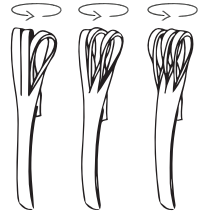

3

Thread the opposite end of the leather through the keyring, with the R.M. Williams branding on the keyring facing you.




4

Continue threading the end of the leather through the loops as indicated.



5

Continue to pull the end through the loops. Making sure to keep the loops neat as the knot gets tighter.

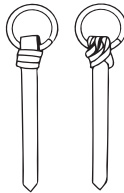

front back